

Instructions

one


Using a standard 13.5 x 18 inch carpet sample, punch four 1/8th inch holes in the corners. The holes should be spaced two inches from the horizontal edge and a half inch from the vertical edge.



two

Once all of the holes have been punched, you can begin assembling the privacy screen. Bend the carpet sample into a U shape and attach the top corner of one carpet sample to the bottom corner of the next carpet sample. Press-Fit rivets are used to attach the carpet samples to each other. Repeat until you have the desired wall size.

Note: The top and bottom samples are created by cutting the sample into thirds, making three 4.5 X 18 inch strips.

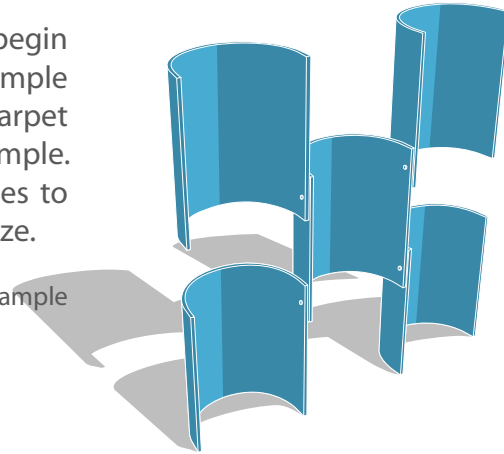

three

Use this method to create the front and back of the screen. Connect the ends of both sides. This will complete the wall and will provide the structure for the screen to stand alone.

